

Supply air: FRS-WBK wall/floor box with floor grille set

Helios wall and floor grilles are designed for use in various room environments and, in combination with the FRS-WBK, enable even introduction of the supply air.



Installation notes

1. Shorten the floor box to screed height.
→ **When using a floor grille, the floor box can be shortened to 100 mm.**
2. Insert the height adjustment frame and secure it on the screed.

The height adjustment frame from the floor grille set must be installed on the screed beneath the finished floor covering (see installation and operating instructions).

